

MIL-38999 Cross Sizes Chart

DTL-38999	Ja-Bar P/N		Shell Size
	XXX-0901-CS	4/001	6
II	XXX-0911-CS	4/002	8
	XXX-0910-CS	4/003	8
	XXX-0908-CS	4/004	8
I & II	XXX-0920-CS	4/005	9,10
	XXX-0917-CS	4/006	10
	XXX-0914-CS	4/007	10s,SL
I & IV (11) and II (12)	XXX-0926-CS	4/008	11,12
	XXX-0929-CS	4/009	12,12s,SL
I & IV (13) and II (14)	XXX-0943-CS	4/010	13,14
	XXX-0939-CS	4/011	14
	XXX-0933-CS	4/012	14,14s
I & IV (15) and II (16)	XXX-0935-CS	4/013	15,16
	XXX-0952-CS	4/014	16
	XXX-0949-CS	4/015	16,16s
I & IV (17) and II (18)	XXX-0966-CS	4/016	17,18
	XXX-0965-CS	4/017	18
	XXX-0964-CS	4/018	18,18S
I & IV	XXX-0987-CS	4/019	19,20
II	XXX-0986-CS	4/020	20
	XXX-0983-CS	4/021	20
I & IV (21) and II (22)	XXX-2901-CS	4/022	21,22
	XXX-0999-CS	4/023	22
	XXX-0995-CS	4/024	22
I & IV (23) and II (24)	XXX-2918-CS	4/025	23,24
	XXX-2917-CS	4/026	24
	XXX-2912-CS	4/027	24
I & IV	XXX-2927-CS	4/028	25
	XXX-2928-CS	4/029	28
	XXX-2938-CS	4/030	32
	XXX-2934-CS	4/031	36
	XXX-2951-CS	4/032	40
	XXX-2956-CS	4/033	44
	XXX-2961-CS	4/034	48
	XXX-2961-CS	4/035	
	XXX-2961-CS	4/036	